

Instructions For using the TW7 Torque wrench

To set the require torque setting do the following:

Example

To set wrench to 19 Newton

Turn the rotating handle until the edge is almost level with the 18 mark on the centre bar then keep turning until the 18 on the handle lines up with the data line see fig 1.

Then turn the handle 1 division further see fig 2 the wrench is now set to 19 Newton.

Each division represents 1 Newton so if required torque was 20 Newton then you would turn 2 divisions past 18.

Fig 1


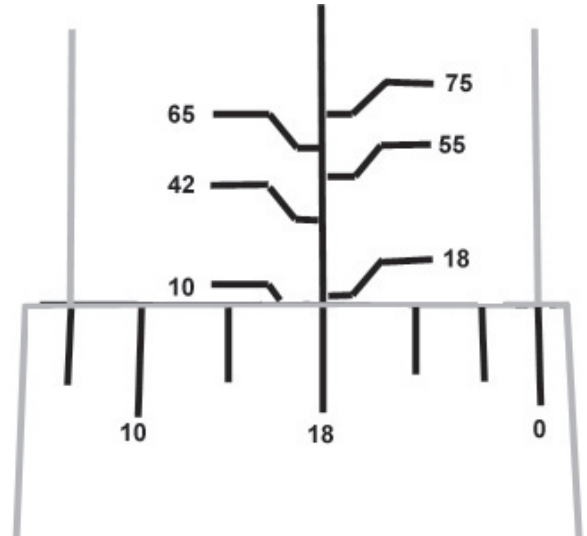


Fig 2

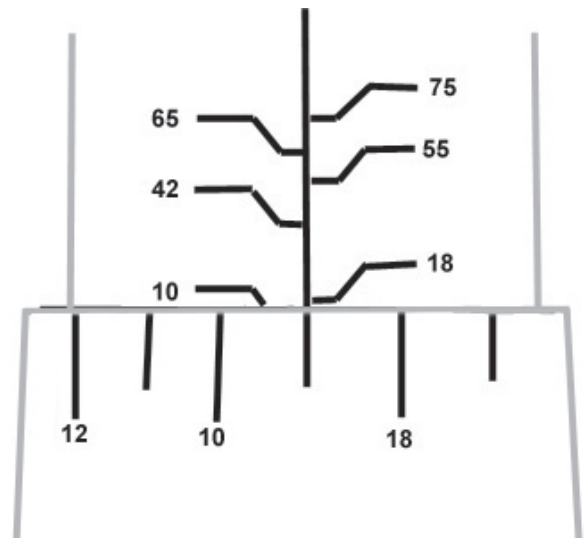

All prices exclude vat and are subject to our usual terms and conditions E & OE

Shoreham

Unit 4, Harbour Way , Shoreham By Sea, West Sussex. BN43 5HG

Tel: 01273 455530**Fax: 01273 455575****Halwill Branch**

Unit 1E , Station Road, Halwill Junction , Beaworthy, Devon. EX23 5TJ

Tel: 01409 221195**Fax: 01409 221643**